

May 24, 2017

Scope of work
CR 20 Sidewalk Repairs


There are 17 sidewalk repair locations on the North side and 14 repair locations on the south side. These are along CR 20 between Hwy 59 and FBE

Base Bid

1. Sawcut first joint East and West of existing inlet top.
2. Demolish and remove existing concrete sidewalk between cut joints.
3. Place select fill and compact to required elevation to 4 ½" below inlet top and below existing sidewalks east and west of top.
4. Form sidewalk extensions to and along existing inlet.
5. Call for city engineering rep. to inspect.
6. Once approved, place concrete and construct control joints as required.
7. Sidewalk to receive a light broom finish.
8. Remove forms and place topsoil along exposed edges as required.
9. Remove from worksite all form material debris, etc.


Add Alternate

1. Construct Detail -1 (Dowell installation) as shown. Begin 6" from outside edges and on 18" centers. Minimum of 2 dowels per mating surface or 6 total per sidewalk repair site.

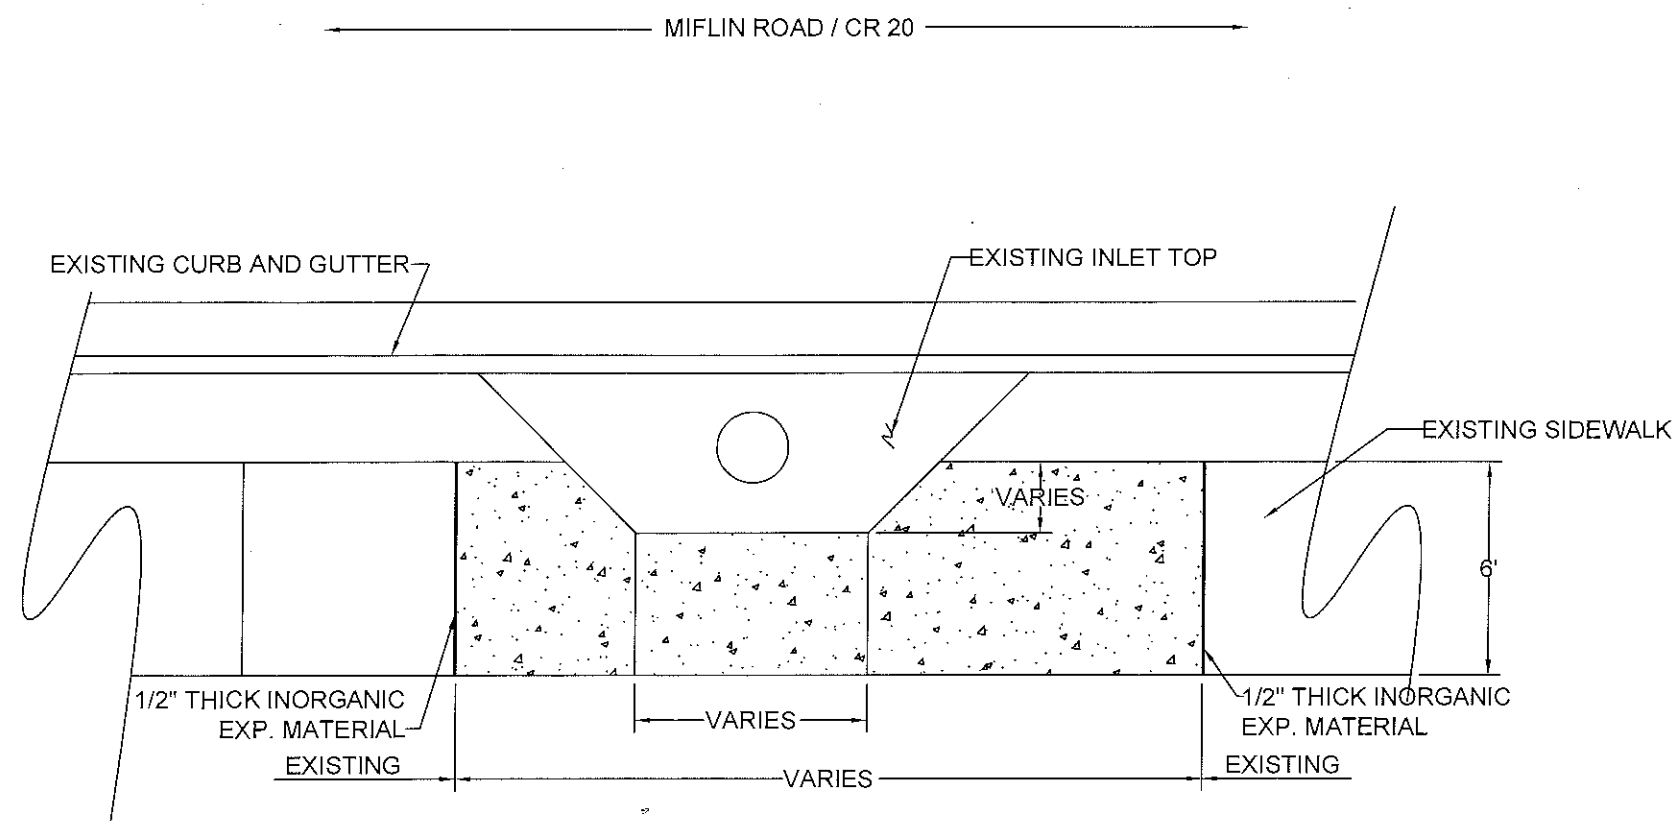

PLAN VIEW

NTS

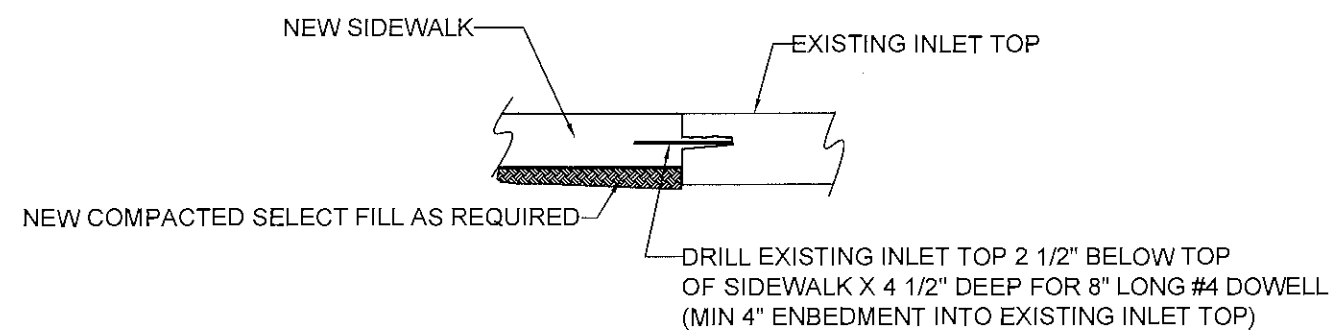

DETAIL -1

NTS

REVISION		
NO.	DATE	DESCRIPTION

CITY OF FOLEY		
CR 20 SIDEWALK REPAIRS		
PLAN AND DETAIL		
DATE:	BY:	SK-01
5/24/2017	RK	